


## Todd Battery Box Installation Instructions

Measure distance between mounting inserts in bottom of battery box. Layout mounting insert locations on a piece of properly sealed 3/4" A-C exterior plywood. (Plywood dimensions to fit your application.) Drill four 5/16" diameter holes at the marked locations. Using 4 stainless steel 1/4-20 x 1 1/4" hex cap bolts fitted with 2" x 1/8" flat aluminum washers and 1/4" stainless steel lock washers, securely fasten the battery box to the plywood. Finish installation by screwing plywood plate securely to stringers, ribs, etc., while maintaining the box in a level position with the vessel at rest.

### Caution!

Be certain that no more than 1/2" of the bolts extend into the mounting inserts in the bottom of the battery box. This procedure will insure more than adequate holding power without stressing the battery box or inserts. When properly installed these products comply with USCG code of Federal Regulations 33, Sub-chapter 183.420.

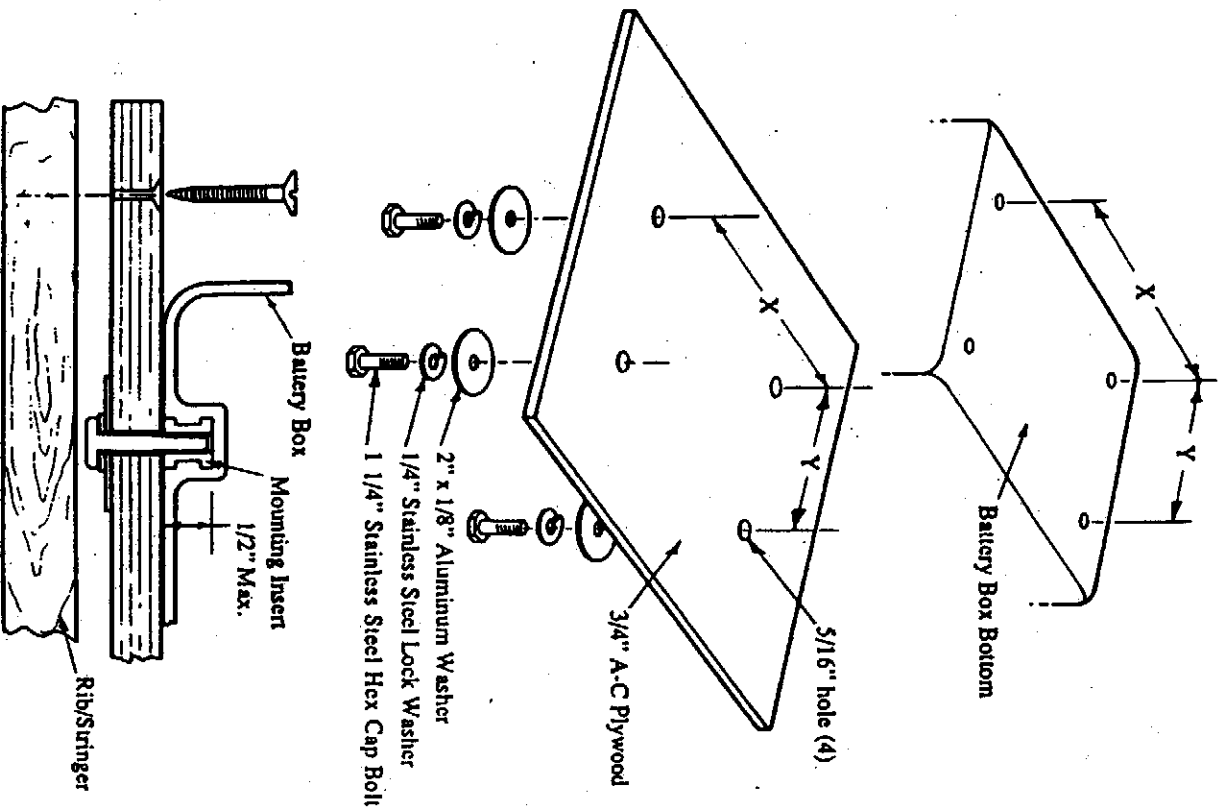

enterprises, inc.  
**todd**

530 Wellington Ave., Cranston, RI 02910  
(401) 467-2750