



DELUXE SWINGBACK ASSEMBLY INSTRUCTIONS

Parts list: Swingback Base, 2 swing arms, backrest, two 2" self tapping screws

1. Remove the acorn nuts from the backrest and position the swing arms on the backrest. (See Drawing 1) Reattach the acorn nuts and tighten them so that the swing arms are pulled in firmly against the backrest.

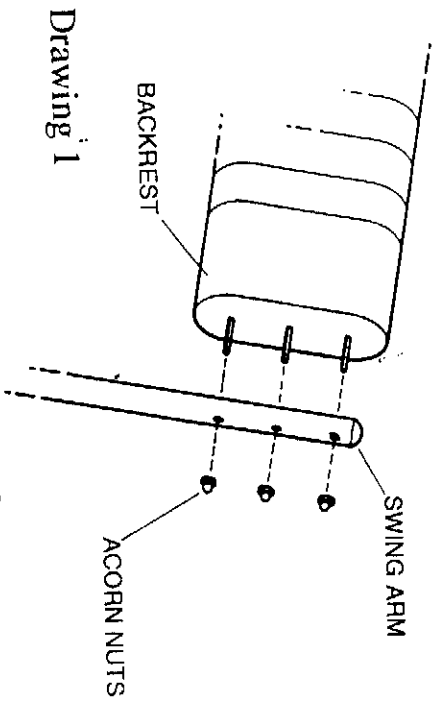

2. Hold the backrest above the base, position the swing arms on either side of the base and slide the swing arms down between the base and its handles. (See Drawing 2) Line up the holes in the swing arms and the base and insert the self tapping screws. Tighten the screws securely, leaving enough play so that the back swings freely.

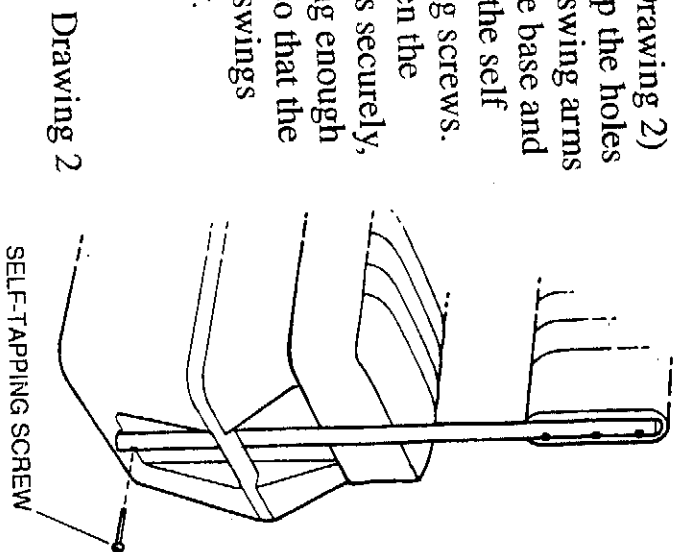

Todd Enterprises
530 Wellington Ave., Cranston, RI 02910