


Todd Helmsman Console Windshield and Grabrail Installation Instructions

Parts list: Windshield and Grabrail package: Windshield, (4) spring loaded fasteners; Grabrail, (4) 1/4-20 machine screws, (4) 1/4-20 hex nuts, (8) washers, and (4) handrail spacers

Grabrail Installation

1. Place washers on the machine screws and insert the screws through the handrail, handrail spacers and into the pre-drilled holes in the sides of the console. Note: The spacers should have the flat ends toward the console and the short spacers go on top. See Drawing #1.

DRAWING #1

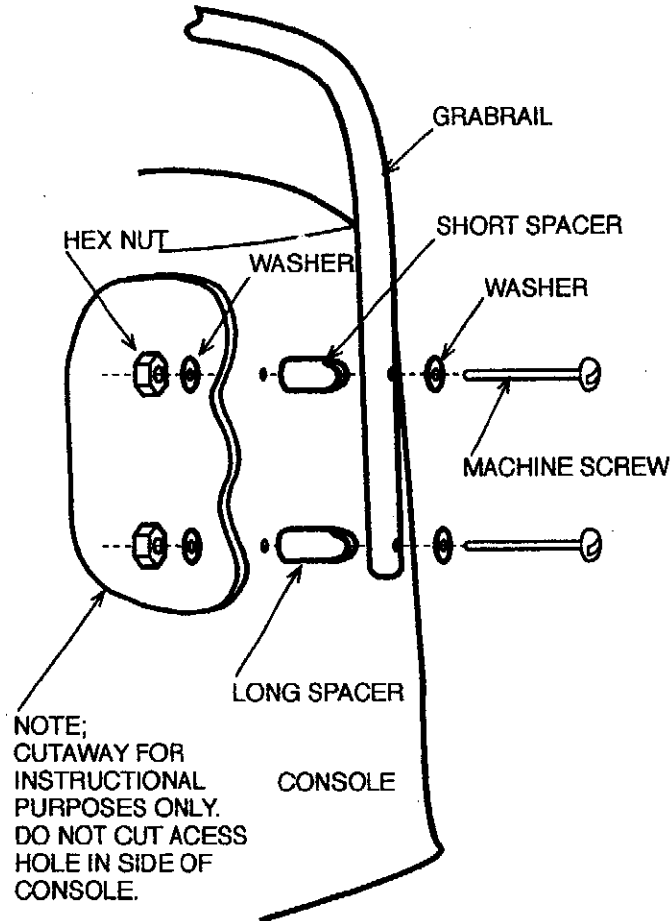

2. Place a washer and nut on each of the 4 screws and hand tighten the 4 nuts. Adjust the spacers so that they are centered on the screws and securely tighten the nuts and screws.

Windshield Installation

1. Position the windshield on the console so that the pre-drilled holes in the windshield line up with the black grommets on the console. Insert the fasteners through the windshield into the grommets. Compress the fastener springs and turn the fasteners 90°. To remove the windshield, reverse the procedure. See Drawing #2.

Console Mounting

1. To mount the console to your deck, use the pre-drilled holes in the base of the console and fasteners appropriate to your situation.

DRAWING #2

