


Todd Leaning Post Assembly Instructions

Parts list: Leaning Post body, grabrail, (2) pedestals, (4) 2" 5/16-18 hex head bolts, (6) 1" 5/16-18 hex head bolts, (20) 5/16" washers and (10) 5/16" hex nuts.

Pedestal Installation

1. Lay the Leaning Post body upside down on a clean surface and attach the pedestals in the following manner: Line up the pre-drilled mounting holes on each pedestal with the pre-drilled holes in the bottom of the Leaning Post. Note: The side of the mounting plate with 3 holes goes to the outside of the Leaning Post. Using three 1" hex bolts with a washer, insert them through the mounting plate and Leaning Post. On the inside of the Leaning Post, add a washer and nut to each bolt and make finger tight. Do the same thing on the other side of the Leaning Post. See Drawing # 1.

DRAWING #1

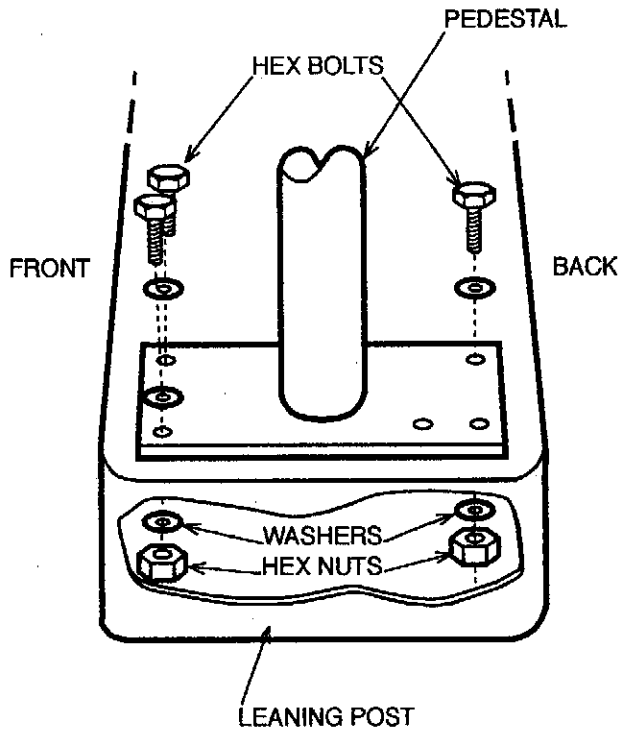

Grabrail Installation

1. Using the 2" bolts with one washer each, insert them through the grabrail, mounting plate and Leaning Post. On the inside of the Leaning Post, add a washer and nut to each bolt and make finger tight. Tighten all nuts securely. See Drawing # 2

DRAWING #2

